


# 65G100 / 65G90 Assembly

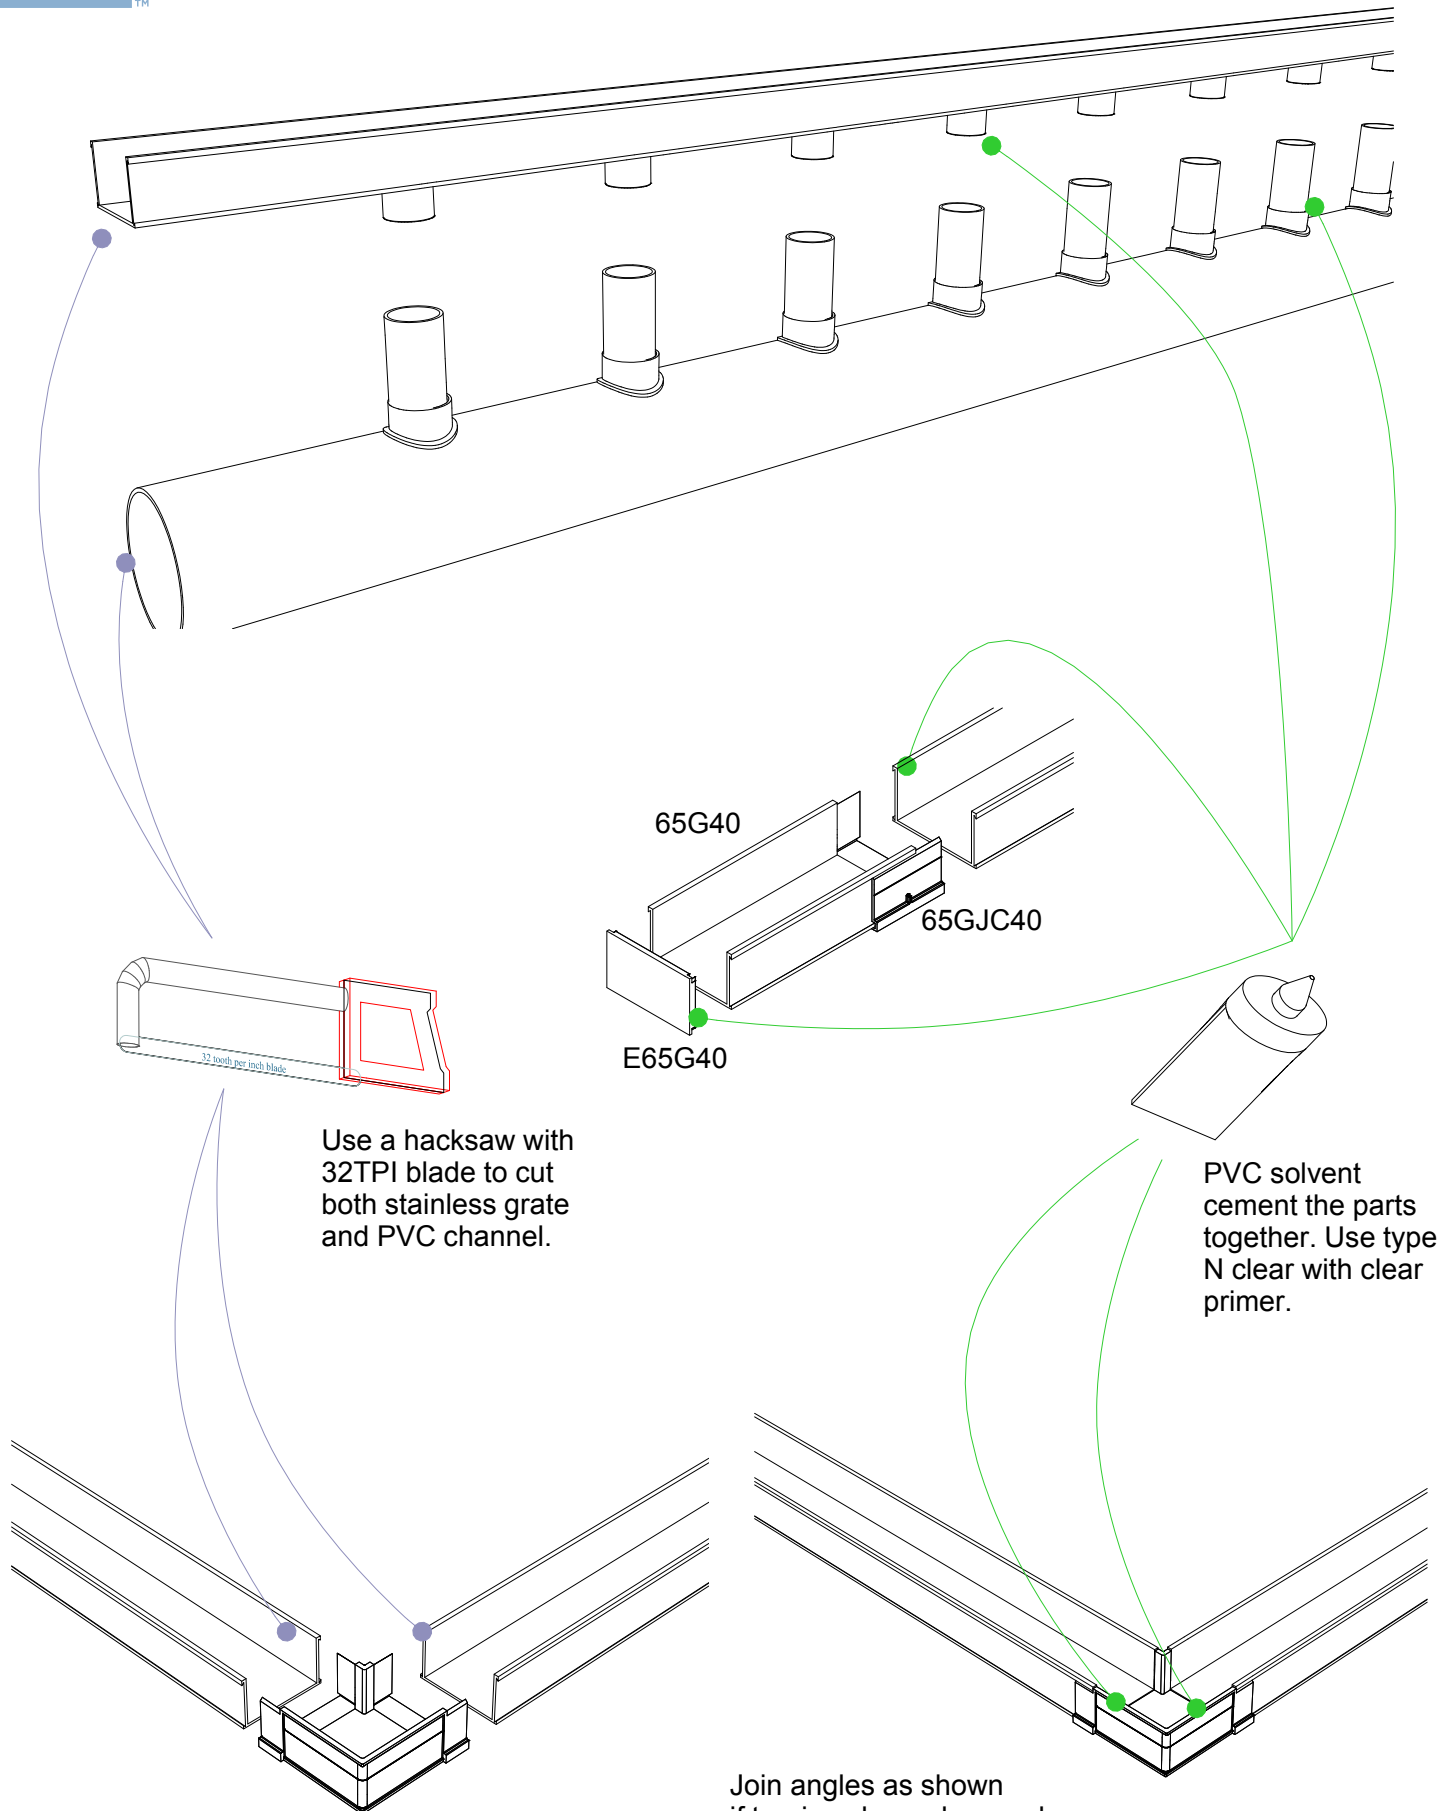

Use a hacksaw with 32TPI blade to cut both stainless grate and PVC channel.

PVC solvent cement the parts together. Use type N clear with clear primer.

Join angles as shown if turning channel around a 90 degree corner.



65GAM40

