
100FTi Against Wall



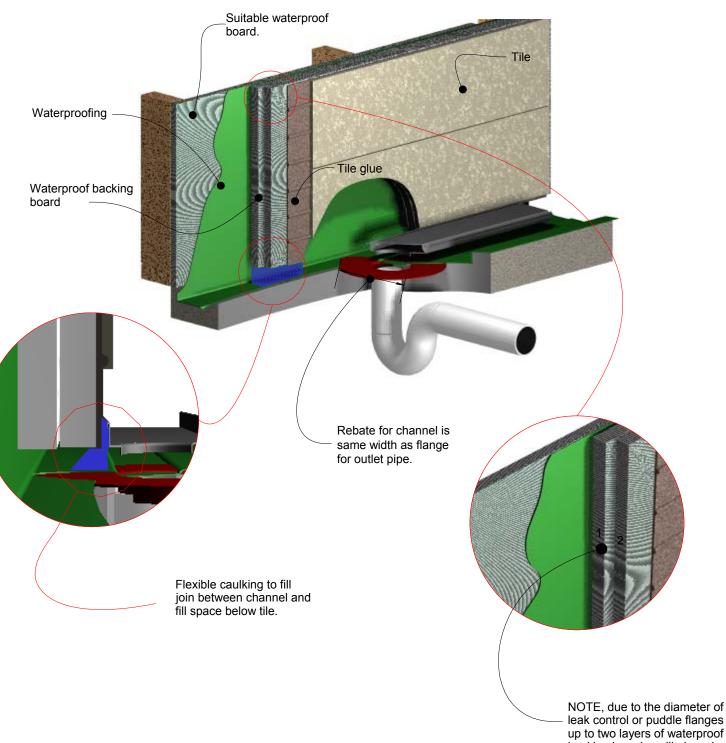

NOTE, due to the diameter of leak control or puddle flanges up to two layers of waterproof backing board or villa board may be needed to pack out wall before tiling.





This drawing is the intellectural property of STORMTECH Pty Ltd.

Drawings are not to scale. Use dimensions shown. Patent number: 733361