


100TRTDiS Linear threshold Drainage System

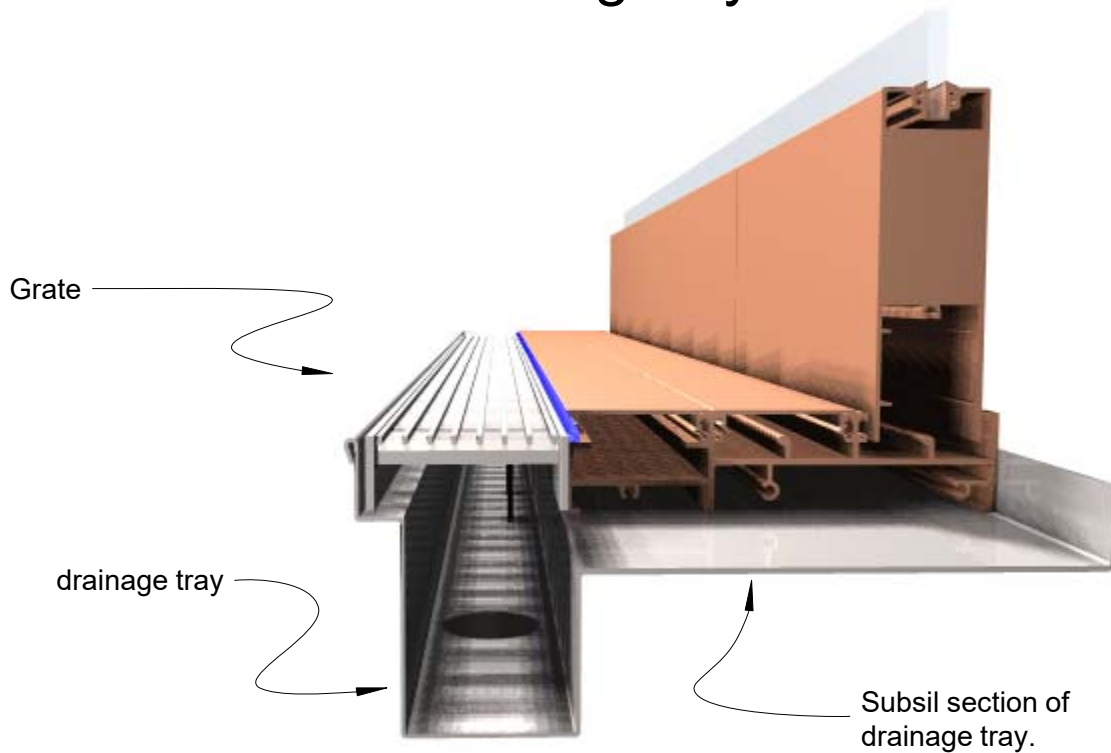

- * The entire door track and 100TRDiS are set in above and separate to waterproofing. Therefore waterproofing must be completed first.
- * The included sub-sil tray must be installed first as the door tracks are installed into tray of the 65TRDiS.
- * Refer to;
AS1428 Design for Access and Mobility
AS4654 for waterproofing

