
100i40 Threshold installation suggestion

For 100ARi40, 100PSi40, 100TRi40

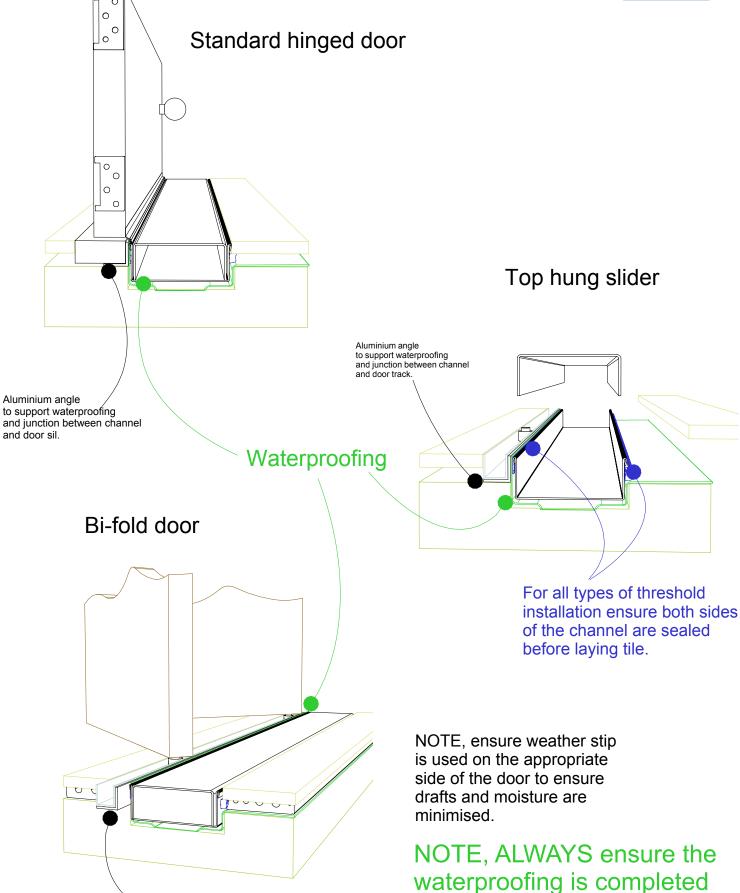



Aluminium angle to support waterproofing and junction between channel

and door track.

before laying the Stormtech.