
100i40 Against Wall For 100ARi40, 100PSi40, 100TRi40



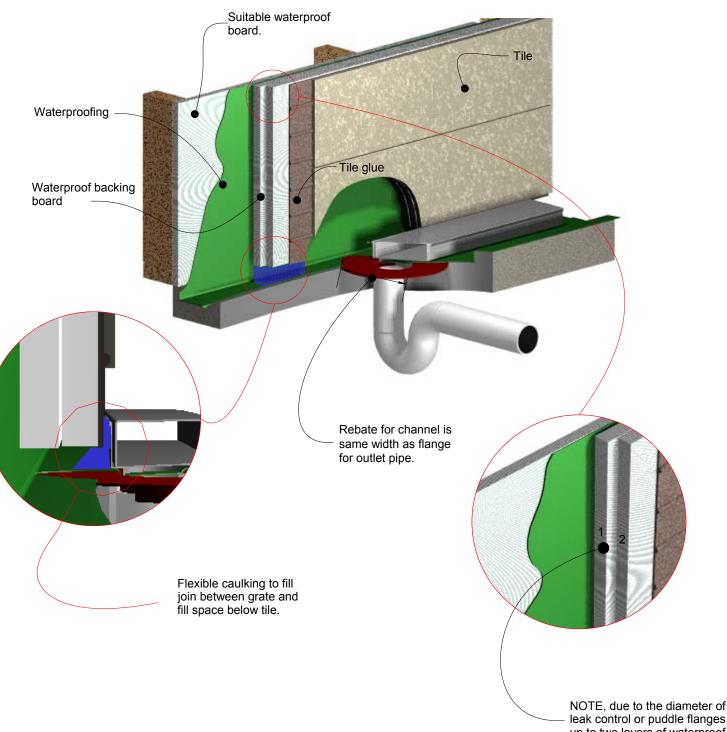

leak control or puddle flanges up to two layers of waterproof backing board or villa board may be needed to pack out wall before tiling.



Copyright 1989-2015 Stormtech Pty Ltd



This drawing is the intellectural property of STORMTECH Pty Ltd.

Drawings are not to scale. Use dimensions shown. Patent number: 733361